




Wood Framed Mirrors




HANGER INSTRUCTIONS

Included in your hardware kit:

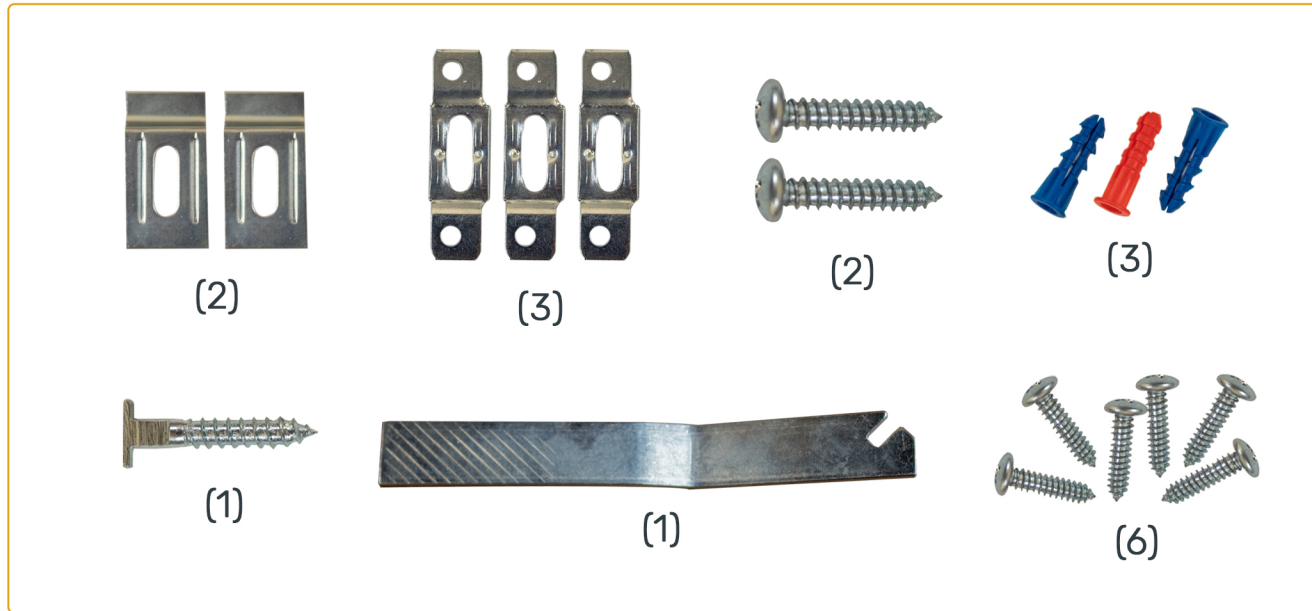

Safeguard Wood Frame Security Hanger

Two plates are attached to top of frame. Third plate is attached to center of the frame bottom. The brackets are screwed into wall and slide into space between top plate and frame. Brackets support frame. T screw fits through bottom plate. T shape of screw fits between lower plate and frame, locking frame. The T part of screw only fits into plate one way. You then turn T screw 1/4 turn so T shape goes across width of the plate, locking the frame. Only the T wrench can turn screw this way. ***Very wide frames may need more top plates / brackets for support.*

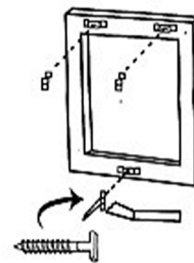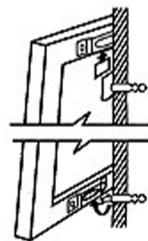

Instructions

Position 2 plates so they are evenly spaced on the top of the frame, able to support frame. Position plates at least 1/2" from edges so as not to be seen. Use 1/2" screws to attach plates. Fasten third plate in the center of the bottom of the frame. Position frame on the wall and mark where brackets should be located, based on position of plates on top of frame. Attach brackets to wall using 2 short anchors and 1" screws. Place frame on brackets, ensuring proper support. Brackets will slide into the space between frame and top plate. Find the center of the bottom plate and note on the wall the corresponding spot. Remove the picture. Put long anchor into wall at spot and insert T screw until it is approximately 1/2" from the wall. Re-hang frame on brackets, lifting the bottom of the frame away from wall so you can see T screw. Align T head so that it fits through the bottom plate. Frame should be almost flush to wall. A little space between frame and wall is normal. From below the picture, grab T screw neck with wrench and turn 90 degrees to lock. Your frame is now secure.